

## Quick Start Guide

### Tiny Size RS232 to Ethernet Serial Converter

MODEL USR-DR301




## 1. Hardware Installation

- Use a standard Ethernet cable to connect the DR301 to an Ethernet router or connect it directly to a PC.
- RS232 can connect with a PC or other serial port device by serial cables



## 2. Serial Port

### RS-232 Terminal Port

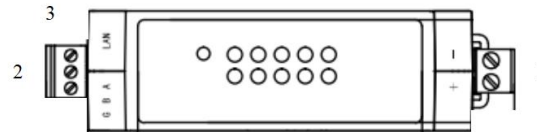

Pin	Definition	Description
1	Power Interface	Power supply: 5-36V DC Wiring needs to check marks '+' '-'
2	RS232 Terminal	Based on the photo, from right to left is Tx, Rx, G
3	RJ45 Port	Ethernet Port

## 3. Software Installation

- Setup Software: [:https://www.usriot.com/support/downloads/usr-m0-setup-software-v224288.html](https://www.usriot.com/support/downloads/usr-m0-setup-software-v224288.html)

**Notes:** Be sure you have administrative rights and disable any firewalls/anti-virus software when installing software.

## 4. Configure USR-DR301 via Web page

- Assign a static IP address to your computer in the **192.168.0.2 to 192.168.0.254** range.

Mask **255.255.255.0**. This is necessary to ensure that your computer can communicate with DR301 converter

- The **default IP address is 192.168.0.7** Open your web browser and enter this IP to connect with DR301 for configure

Default Parameters	
User Name	admin
Password	admin
IP address	192.168.0.7
Mask	255.255.255.0
Gateway	192.168.0.1
Work Mode	TCP Client
Local Port	0
Baud Rate	115200
Target Port	8234
Target IP	192.168.0.201
Parity bit/Data bit/Stop bit	None/8/1