

AWK-1151C Series

Quick Installation Guide

Moxa AirWorks

Version 1.0, September 2022

Technical Support Contact Information
www.moxa.com/support

MOXA®

© 2022 Moxa Inc. All rights reserved.

P/N: 1802011510010



Overview

The AWK-1151C Series is an industrial-grade Wi-Fi client with IEEE 802.11ac Wave 2 technology. This Series features dual-band Wi-Fi data transmissions up to 400 Mbps (2.4 GHz mode) or 867 Mbps (5 GHz mode), meeting the speed and flexibility requirements for industrial applications. In addition, the built-in dual band pass filter and the wide-temperature design ensure the reliability and continuous operation in harsh environments. Meanwhile, backwards compatibility with 802.11a/b/g/n makes the AWK-1151C the ideal solution for constructing a versatile wireless data transmission system.

This product can be deployed on vehicles as the control unit's wireless interface that collects data from different I/O devices and transmits the data to vehicle dispatch centers.

Hardware Setup

This section covers the hardware setup for the AWK-1151C.

Package Checklist

Moxa's AWK-1151C is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.


- 1 x AWK-1151C wireless client
- 2 x 2.4/5 GHz antennas: ANT-WDB-ARM-0202
- DIN-rail kit (pre-installed)
- Quick installation guide (printed)
- Warranty card

Optional Mounting Accessories (Sold Separately)


- Wall-mount kit including 6 screws (M3x6 mm)

Panel Layout of the AWK-1151C


Top Panel View

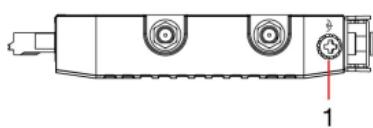


Bottom Panel View

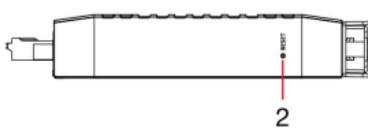


Front Panel View

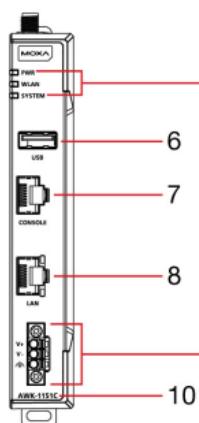


Side Panel View (Label Side)

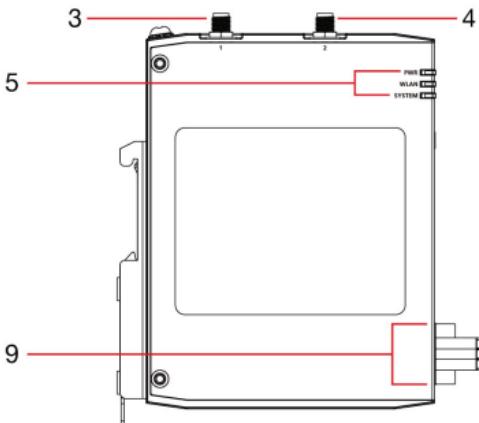

Rear Panel View

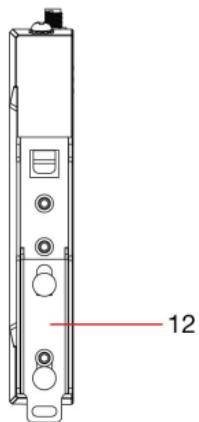



Side Panel View (Wall mount Side)

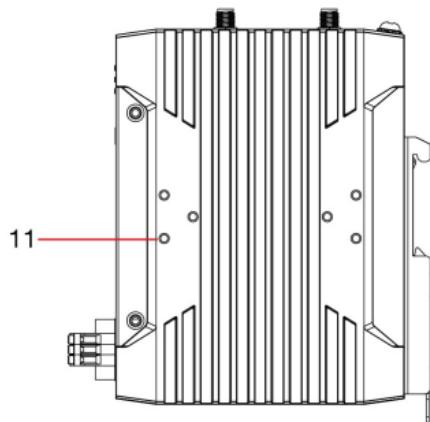

- | | |
|--------------------------------------|---|
| 1. Grounding screw (M5) | 8. LAN port (10/100/1000BaseT(X), RJ45) |
| 2. Reset button | 9. Terminal blocks for PWR (V+, V-, Functional Ground) |
| 3. Antenna connector 1 | 10. Model name |
| 4. Antenna connector 2 | 11. Screw holes for wall-mounting kit |
| 5. System LEDs: PWR, WLAN, SYSTEM | 12. DIN-rail mounting kit (screw size M3x4 mm) |
| 6. USB host (type A for ABC-02) | |
| 7. Console port (RS-232, RJ45) | |

Mounting Dimensions

Unit: mm (inch)

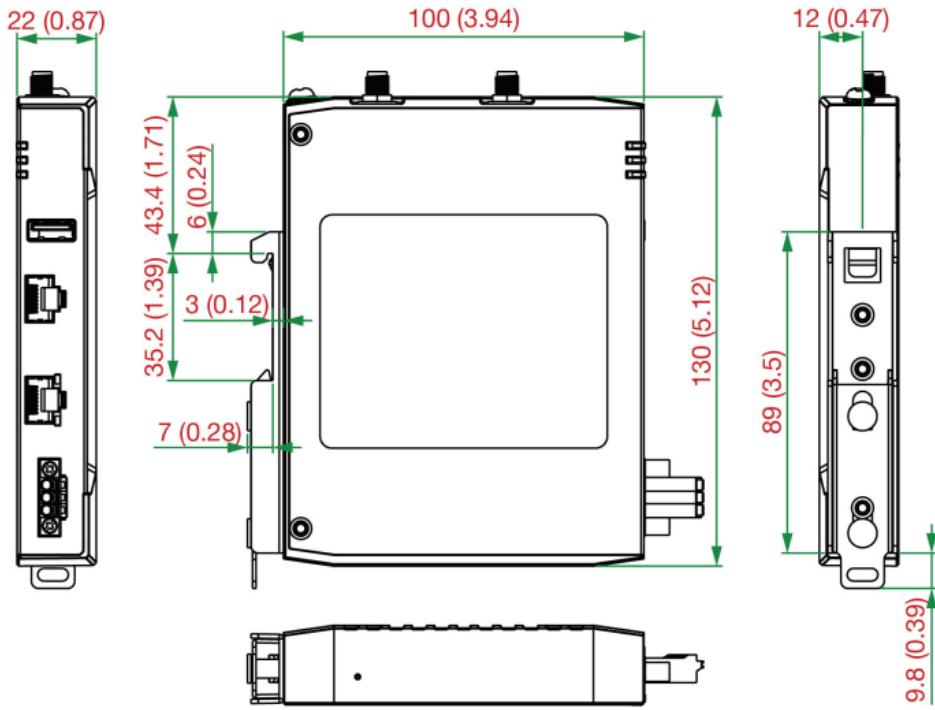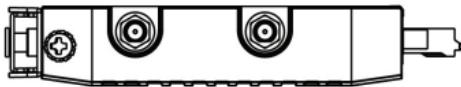

DIN-rail Mounting


When shipped, the metal DIN-rail mounting kit is fixed to the back panel of the AWK-1151C. Mount the AWK-1151C on to a corrosion-free mounting rail that adheres to the EN 60715 standard.

STEP 1:

Insert the upper lip of the DIN-rail kit into the mounting rail.

STEP 2:

Press the AWK-1151C towards the mounting rail until it snaps into place.

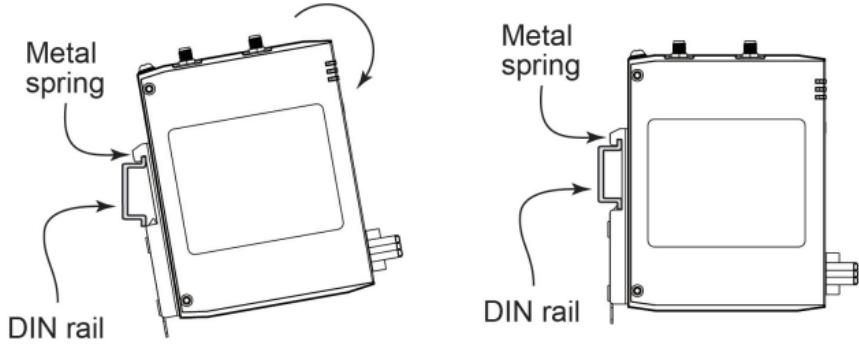


To remove the AWK-1151C from the DIN rail, do the following:

STEP 1:

Pull down the latch on the DIN-rail kit with a screwdriver.

STEP 2 & 3:

Slightly pull the AWK-1151C forward and lift it up to remove it from the mounting rail.

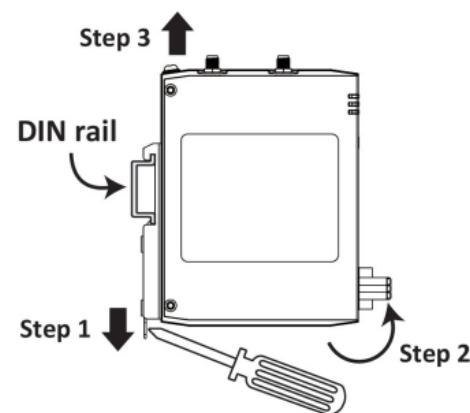


Wall Mounting (Optional)

For some applications, it may be more convenient to mount the AWK-1151C to a wall, as illustrated below.


STEP 1:

Remove the aluminum DIN-rail attachment plate from the AWK-1151C, and then attach the wall-mounting plates with M3 screws, as shown in the adjacent diagrams.

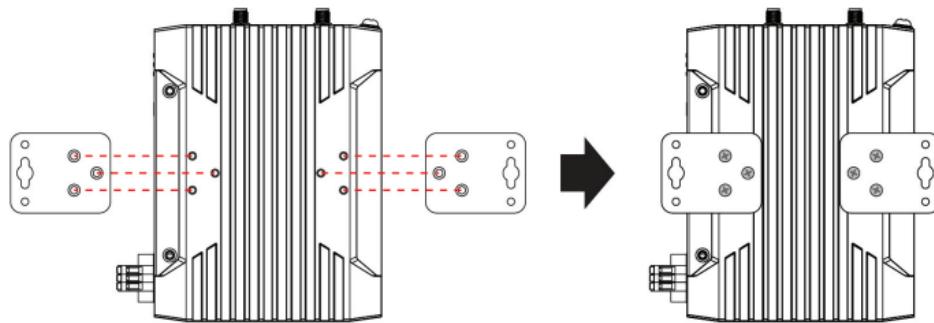

STEP 2:

Mounting the AWK-1151C to a wall requires 2 screws. Use the AWK-1151C device, with wall-mounting plates attached, as a guide to mark the correct locations of the 2 screws on the wall. The heads of the screws should be less than 6.0 mm in diameter, the shafts should be less than 3.5 mm in diameter, and the screw length should be at least 15 mm, as shown in the figure on the right.

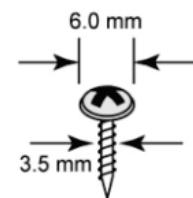


Do not drive the screws in all the way—leave a space of about 2 mm to allow room for sliding the wall-mounting panel between the wall and the screws.

NOTE Test the screw head and shank size by inserting the screws into one of the keyhole shaped apertures of the wall-mounting plates before they are fixed to the wall.

STEP 3:

Once the screws are fixed into the wall, insert the screw heads through the large opening of the keyhole-shaped apertures, and then slide the AWK-1151C downwards, as indicated to the right. Tighten the screws for added stability.

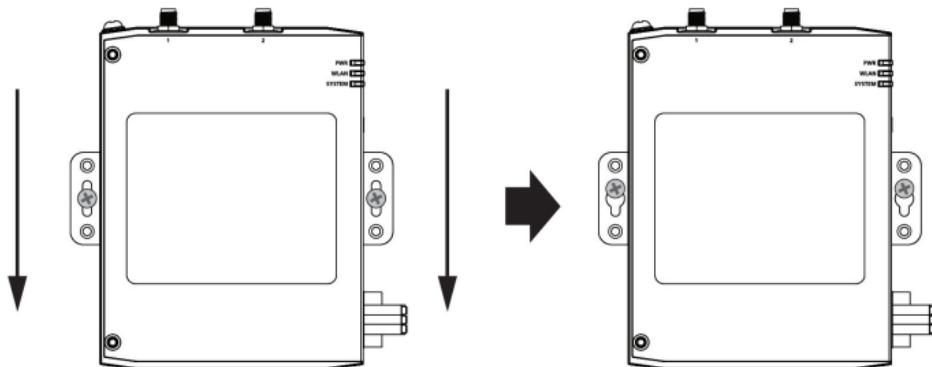

WARNING

- This equipment is intended to be used in a Restricted Access Location, such as an enclosed machine cabinet or chassis where only authorized service personnel or users can gain access. Such personnel must be instructed about the fact that the metal chassis of the equipment can be extremely hot and may cause burns.
- Service personnel or users have to pay special attention and take special precautions before handling this equipment.
- Only authorized, well-trained professionals should be allowed to access the restricted access location. Access should be controlled by the authority responsible for the location with lock and key or a security identity system.
- **External metal parts are hot!!** Pay special attention or use special protection before handling the equipment.

Wiring Requirements



WARNING

Safety First!

Be sure to disconnect the power cord before installing and/or wiring your AWK-1151C.

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes that dictate the maximum current allowed for each wire size. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

Read and Follow These Guidelines:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the crossing point.

NOTE Do not run signal or communications wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.

- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separated.
- For future reference, you should label the wiring used for all of your devices.

NOTE The product is intended to be supplied by a UL Listed Power Unit marked "L.P.S." (or "Limited Power Source") and is rated 9-30 VDC, 1.57-0.47 A min, Tma min. 75°C. If you need further assistance with purchasing the power source, please contact Moxa for further information.

NOTE If using a Class I adapter, the power cord must be connected to a socket-outlet with an earthing connection.



ATTENTION

Make sure the external power adapter (includes power cords and plug assemblies) provided with the unit is certified and suitable for use in your country or region.

Grounding the AWK-1151C

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.




ATTENTION

This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel. The potential difference between any two grounding points must be zero. If the potential difference is NOT zero, the product could be permanently damaged.

Installations with Cable Extended Antennas for Outdoor Applications

If an AWK device or its antenna is installed in an outdoor location, proper lightning protection is required to prevent direct lightning strikes to the AWK device. In order to prevent the effects of coupling currents from nearby lightning strikes, a lightning arrester should be installed as part of your antenna system. Ground the device, antenna, as well as the arrester properly to provide maximum outdoor protection for the device.

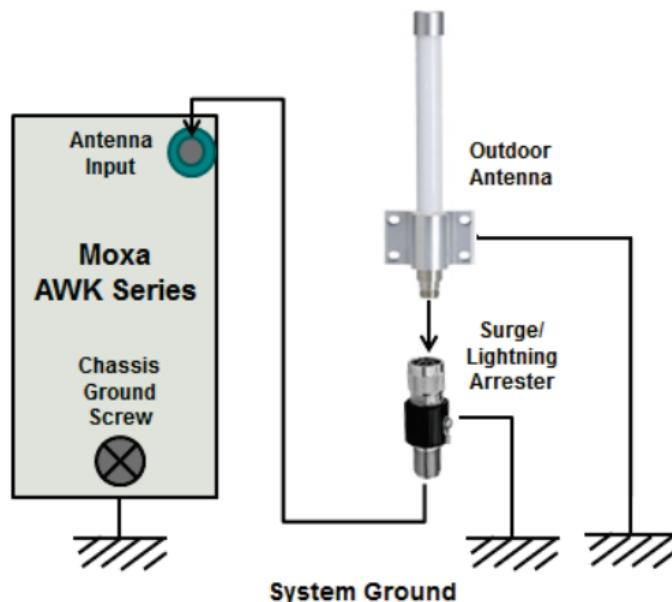

Arrester Accessories

- **SA-NMNF-02:** Surge arrester, N-type (male) to N-type (female)
- **SA-NFNF-02:** Surge arrester, N-type (female) to N-type (female)

Terminal Block Pin Assignment

The AWK-1151C comes with a 3-pin terminal block located on the front panel of the device. The terminal block contains the power input and functional ground. Refer to the following figure and table for the detailed pin assignment.

A schematic diagram of a 3-pin terminal block. The pins are labeled 1, 2, and 3 from top to bottom. Pin 1 is marked with a 'V+' symbol, Pin 2 with a 'V-' symbol, and Pin 3 with a ground symbol (a circle with a cross). To the right of the diagram is a table defining the pin assignments.

| Pin | Definition |
|-----|------------------|
| 1 | DC Power Input 1 |
| 2 | Functional GND |
| 3 | |

NOTE Before connecting the AWK-1151C DC power inputs, make sure the DC power source voltage is stable.

- The wiring for the input terminal block shall be installed by a skilled person.
- Wire type: Cu
- Only use 16-28 AWG wire size.
- Use only one conductor in a clamping point between the DC power source and the power input.



ATTENTION

If the AWK-1151C is connected to a motor or other similar type of equipment, be sure to use power isolation protection. Before connecting the AWK-1151C to the DC power inputs, make sure the DC power source voltage is stable.


Communication Connections

10/100/1000BaseT(X) Ethernet Port Connection

The 10/100/1000BaseT(X) ports located on the AWK-1151C's front panel are used to connect to Ethernet-enabled devices.

MDI/MDI-X Port Pinouts


| Pin | 1000BaseT MDI/MDI-X | 10/100BaseT(X) MDI | 10/100BaseT(X) MDI-X |
|-----|------------------------|-----------------------|-------------------------|
| 1 | TRD(0)+ | TX+ | RX+ |
| 2 | TRD(0)- | TX- | RX- |
| 3 | TRD(1)+ | RX+ | TX+ |
| 4 | TRD(2)+ | - | - |
| 5 | TRD(2)- | - | - |
| 6 | TRD(1)- | RX- | TX- |
| 7 | TRD(3)+ | - | - |
| 8 | TRD(3)- | - | - |

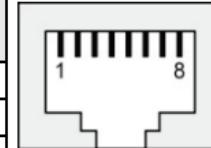

RS-232 Connection

The AWK-1151C has one RS-232 (8-pin RJ45) console port located on the front panel. Use either an RJ45-to-DB9 or RJ45-to-DB25 cable to connect the AWK-1151C's console port to your PC's COM port. You may then use a console terminal program to access the AWK-1151C for console configuration.

| Pin | Description |
|-----|-------------|
| 1 | DSR |
| 2 | NC |
| 3 | GND |
| 4 | TXD |
| 5 | RXD |
| 6 | NC |
| 7 | NC |
| 8 | DTR |

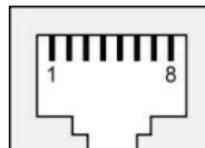

LED Indicators

The front panel of the AWK-1151C contains several LED indicators. The function of each LED is described in the table below:

| LED | Color | State | Description |
|--|-------|----------|--|
| Front Panel LED Indicators (System) | | | |
| PWR | Green | On | Power is being supplied. |
| | | Off | Power is not being supplied. |
| SYSTEM | Red | On | System initialization failure, configuration error, or system error. Refer to the AWK-1151C Series User Manual for more details. |
| | Green | On | System startup completed and is operating normally. |
| WLAN | Green | On | Client/Client-Router/Slave has established a Wi-Fi connection to an AP/Master with a SNR value of 35 or higher. |
| | | Blinking | Data is being transmitted over the WLAN interface. |
| | Amber | On | Client/Client-Router/Slave has established a Wi-Fi connection to an AP/Master with a SNR value of less than 35. |
| | | Blinking | Data is being transmitted over the WLAN interface. |
| LAN LED Indicators (RJ45 Port) | | | |
| LAN | Green | On | LAN port's 1000 Mbps link is active . |
| | | Blinking | Data is being transmitted at 1000 Mbps. |
| | | Off | LAN port's 1000 Mbps link is inactive . |
| | Amber | On | LAN port's 10/100 Mbps link is active . |
| | | Blinking | Data is being transmitted at 10/100 Mbps. |
| | | Off | LAN port's 10/100 Mbps link is inactive . |

Specifications

| | |
|-----------------------|--|
| Input Current | 9 to 30 VDC, 1.57 to 0.47 A |
| Input Voltage | 9 to 30 VDC |
| Power Consumption | 14 W (max.) |
| Operating Temperature | Standard Models: -25 to 60°C (-13 to 140°F) Wide Temp. Models: -40 to 75°C (-40 to 167°F) |
| Storage Temperature | -40 to 85°C (-40 to 185°F) |

NOTE To meet the standard for IP30 protection, all unused ports should be covered with the protective caps.



ATTENTION

The AWK-1151C is NOT a portable mobile device and should be located at least 20 cm away from the human body.

The AWK-1151C is NOT designed for the general public. To ensure that your AWK-1151C wireless network is safe and configured correctly, consult a well-trained technician to assist with the installation process.



ATTENTION

Use the appropriate antennas for your wireless setup: Use 2.4 GHz antennas when the AWK-1151C is configured for IEEE 802.11b/g/n. Use 5 GHz antennas when the AWK-1151C is configured for IEEE 802.11a/n/ac. Make sure that the antennas are located in an area with a lightning and surge protection system installed.



ATTENTION

Do not locate the antenna near overhead power lines or other electric light or power circuits, or where it can come into contact with such circuits. When installing the antenna, take extreme care not to come into contact with such circuits, because they may cause serious injury or death. For proper installation and grounding of the antenna, refer to national and local codes (for example, U.S.: NFPA 70; National Electrical Code (NEC) Article 810; Canada: Canadian Electrical Code, Section 54).

NOTE For installation flexibility, you can use either antenna 1 or antenna 2. Make sure the antenna connection matches the antennas configured in the AWK-1151C web interface.

To protect the connectors and RF module, all radio ports should be terminated by either an antenna or a terminator. We strongly recommend using resistive terminators for terminating the unused antenna ports.

Software Setup

This section covers the software setup for the AWK-1151C.


How to Access the AWK

Before installing the AWK device (AWK), make sure that all items in the package checklist are provided in the product box. You will also need access to a notebook computer or PC equipped with an Ethernet port.

- **Step 1: Connect the AWK to an appropriate DC power source.**

- **Step 2: Connect the AWK to the notebook or PC via the AWK's LAN port.**

The LED indicator on the AWK's LAN port will light up when a connection is established.

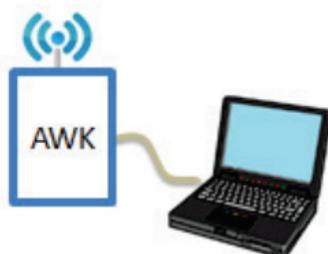

NOTE If you are using an Ethernet-to-USB adapter, follow the instructions in the user manual provided with the adapter.

- **Step 3: Set up the computer's IP address.**

Choose an IP address for the computer that is on the same subnet as the AWK. Since the AWK's default IP address is **192.168.127.253**, and the subnet mask is **255.255.255.0**, set the IP address to **192.168.127.xxx**, where **xxx** is a value between 1 and 252.


- **Step 4: Access the homepage of the AWK.**

Open your computer's web browser and type **https://192.168.127.253** in the address field to access the AWK's homepage. If successfully connected, the AWK's interface homepage will appear. Click **NEXT**.



- **Step 5: Choose your country or region.**


Select your country or region from the drop-down list and click **NEXT**.

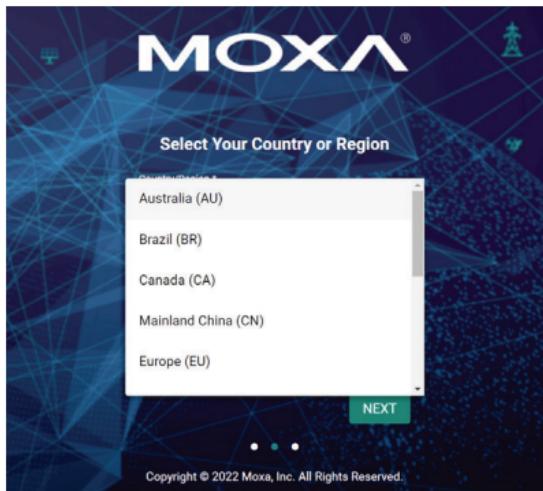


- **Step 6: Create a user account and password.**

Enter the username, password, and email address for your user account and click **CREATE**.

NOTE The username and password are case-sensitive.

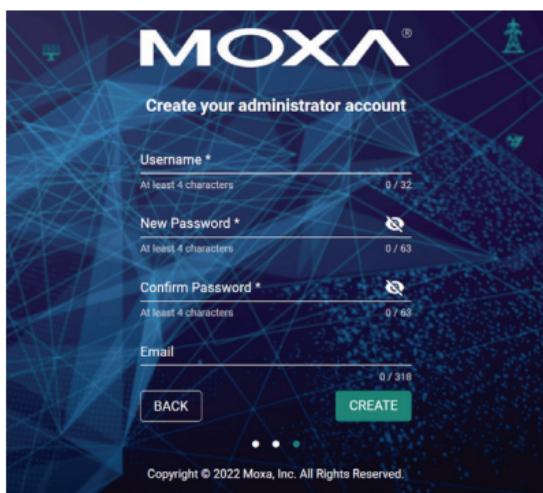

After creating your account, you will be automatically redirected to the login screen.

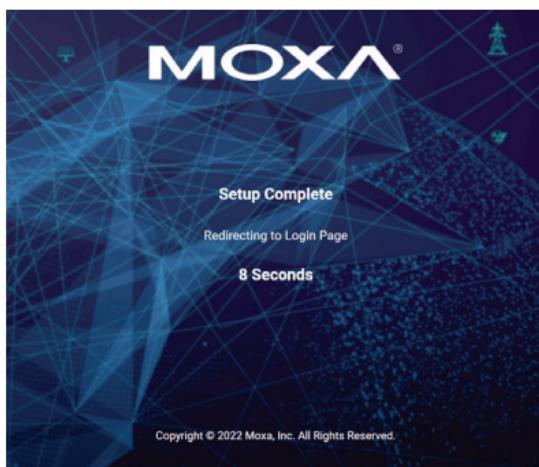

- **Step 7: Log in to the device.**

Enter your username and password and click **LOG IN**. The device will start initializing, this may take several seconds. Once the warning message has disappeared, you can log in using your username and password.



First-time Quick Configuration

After successfully accessing the AWK, refer to the appropriate subsection below to quickly set up a wireless network.

NOTE Ensure that there are no IP address conflicts when you configure more than one AWK on the same subnet.


Configuring the AWK as a Client

Set the operation mode of the AWK to Client mode.

Go to **Wi-Fi → Wireless Settings** and select **Client** from the Operation Mode drop-down list, set the SSID, and click **Apply**. For more detailed configurations, refer to the **AWK-1151C Series User Manual**.

The screenshot shows the 'Wireless Setting' configuration page. On the left, there's a sidebar with various settings like Device Summary, System, Wi-Fi, and Wireless Settings (which is highlighted with a red box). The main area has tabs for General, Operation Mode, SSID Settings, Security Settings, RF Settings, and Advanced Settings. The 'Operation Mode' tab is selected and shows 'Client' as the current setting. The 'SSID Settings' section shows 'Moxa' as the SSID. The 'Security Settings' section shows 'Open'. At the bottom right is a large green 'APPLY' button, which is also highlighted with a red box.


Slave Mode

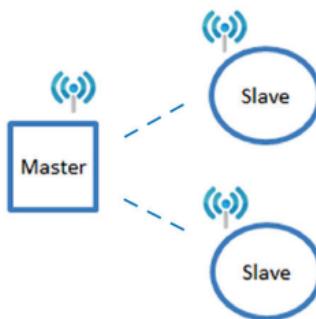

Configuring the AWK as a Slave

Set the operation mode of the AWK to Slave mode.

Go to **Wi-Fi → Wireless Settings** and select **Slave** from the Operation Mode drop-down list, set the SSID, and click **Apply**. For more detailed configurations, refer to the **AWK-1151C Series User Manual**.

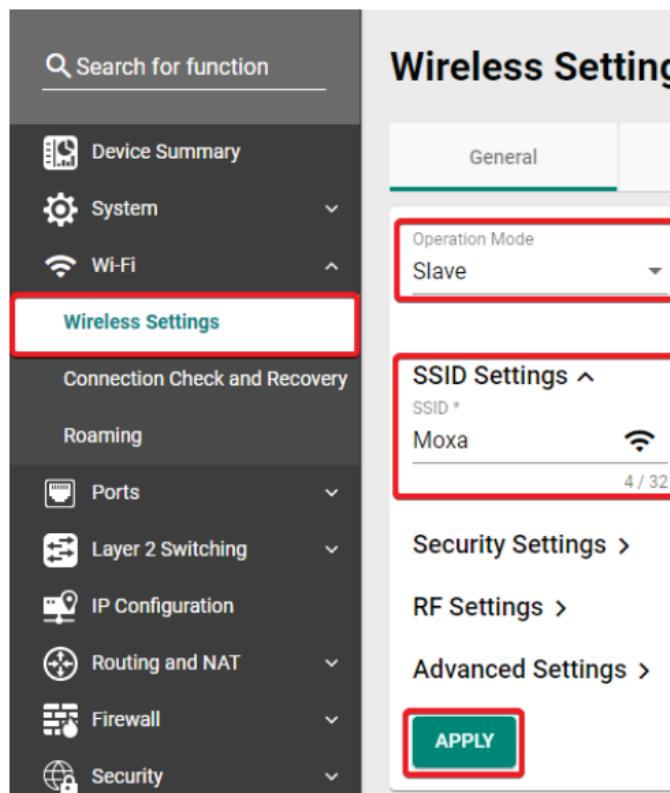

Certifications

FCC/IC Statements

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radio Transmitters (Part 15)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Canada, Innovation, Science and Economic Development Canada (ISED) Notices

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

Avis du Canada, Innovation, Sciences et Développement économique Canada (ISED)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NCC Statements

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

應避免影響附近雷達系統之操作。

KC Statements

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

ANATEL Statements

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL - <https://www.gov.br/anatel>

NOTE ANATEL

When the device is installed outdoors, it is prohibited to use frequency bands U-NII-1 (5.15 - 5.25GHz) and U-NII-2A (5.25 - 5.35GHz).
